


**Regular cleaning guarantees a long and failure-free operation!**

You can avoid potential dead-times of the equipment caused by dirt or end-user complaints!  
(e.g.: coin jams, many rejections, etc.)





**Please pull the counting unit from the machine as far as it will go!**

Please fold the coin slide open and beginn the cleaning with the enclosed scraper.

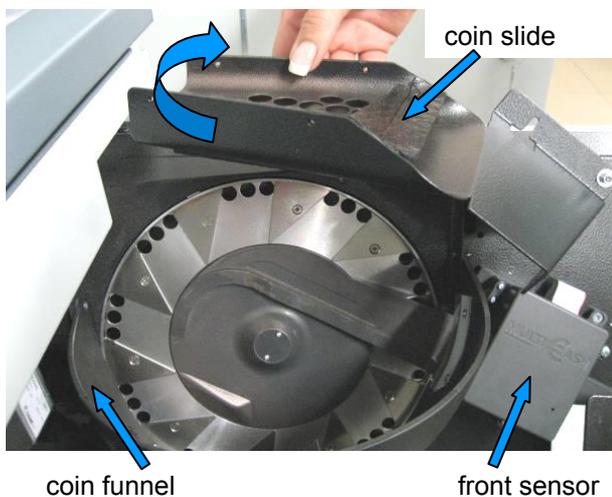

**CLEANING WITH SCRAPER WHEN THE BIN IS EMPTY**

You can remove the glued dirt deposits on the **coin run** or the **coin forward triangles** very quickly with the scraper. Please clean the routes as you can see it on the following pictures.

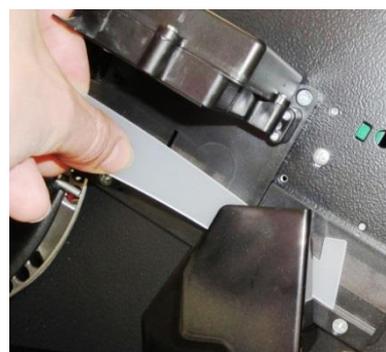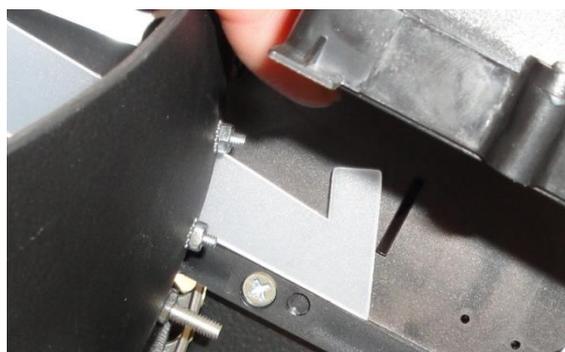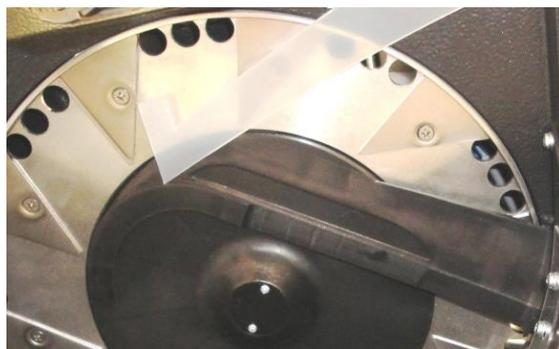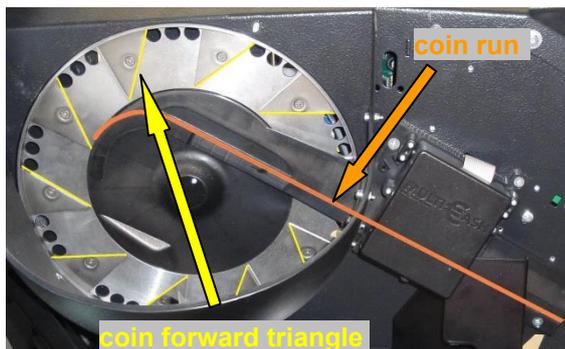


### **CLEANING WITH CLEANING CLOTHS - AT LEAST ONCE A WEEK**

With the **wet synthetics cleaning cloths** you can solve the residual dirt and make the surface more slidable for the coins again.

Please fold up the front sensor and clean it. Afterward clean the **coin run** and the **coin forward tray and its triangles**. If necessary you can also clean the coin funnel.

Below you can find some pictures for better demonstration.

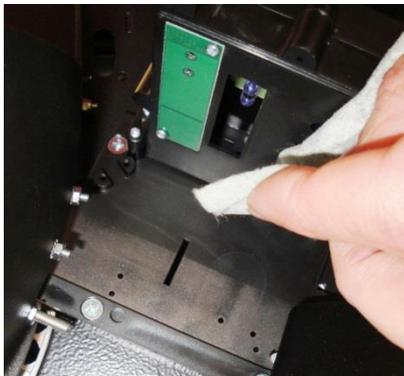

Please wipe the solved dirt desposits from the front sensor, the **coin run** and the **coin forward tray and its triangles** with the dry cleaning cloths.



### **CARD READER CLEANING WITH MICRO FIBER CARDS - AT LEAST ONCE A MONTH**

The enclosed **micro fiber cleaning card** should be used for **the cleaning of the card reader**. To ensure a proper recognition of the customer cards you should clean the reader at least once a month. Just put the cleaning card into the working reader and remove.